Miele

Fully Integrated 30" Refrigerator

K 1813 Vi / K 1803 Vi

FOR FLUSH INSTALLATION

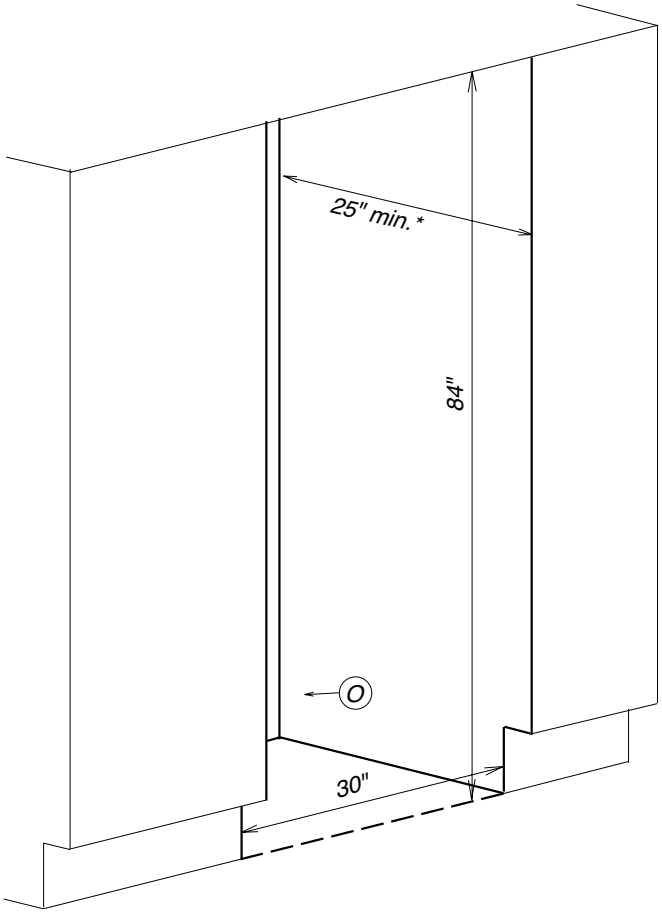

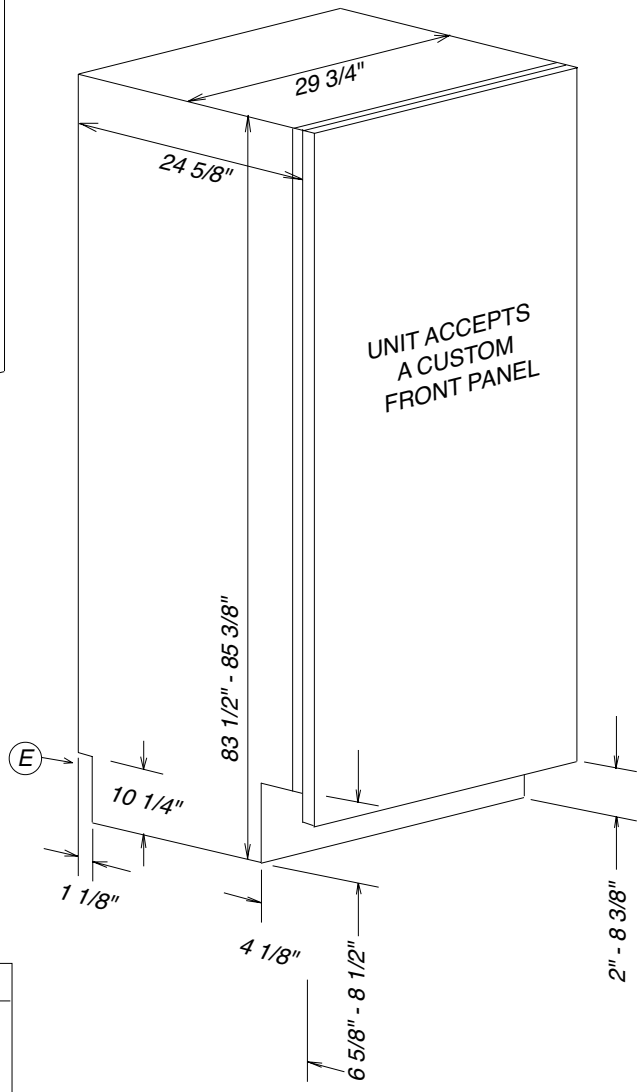

Location Codes
E - 5 foot - 120 Volt - 15 Amp 3-wire molded plug power supply connects lower left rear *O - Standard NEMA 5-15 Duplex Outlet - locate less than 9" above finished floor*
Notes
• *All Installations must be done in accordance with local codes* • *Sides of adjoining cabinets should be filled (flush to frame) to insure proper fit and finish* • *For Proud Installation - please adjust accordingly*

** Depth assumes a 3/4" panel, please adjust according to custom panel thickness*

CUSTOM PANEL INSTALLATIONS

***These units do not come equipped with a front panel**. They are designed to accept a custom door panel supplied by the cabinet maker. Miele has a unique panel integration system which allows the panels to align with the surrounding cabinets.*

Panel size is determined in the following manner:

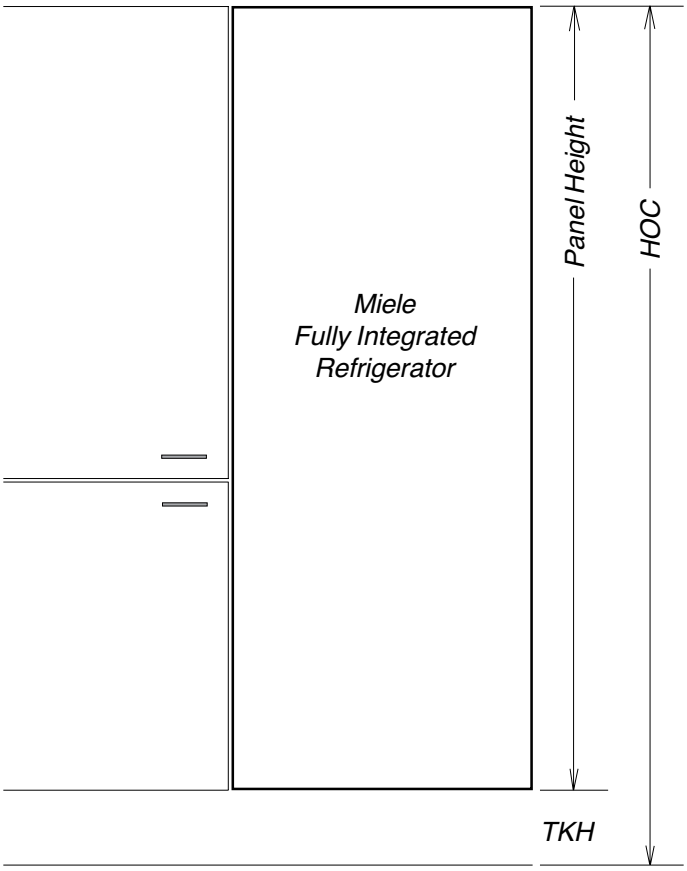

Width: *29 3/4" in all cases*

Thickness: *Minumum 3/4" outside frame*

Height: *Determined using the following calculation:*

Panel Height = HOC - TKH

***HOC** = Total height of cabinet or side panel*
***TKH** = Toe-kick height*

***Note**: Finish back side of panels to insure appearance Panel may extend above unit. This is **not** considered in height calculation*

***Maximum panel weight**: 110 Pounds*

Panel Notes

If the adjoining cabinets are taller than the height of machine (HOM) - the front panel may be extended accordingly. Simply maintain the toekick height and extend the panel the needed distance.

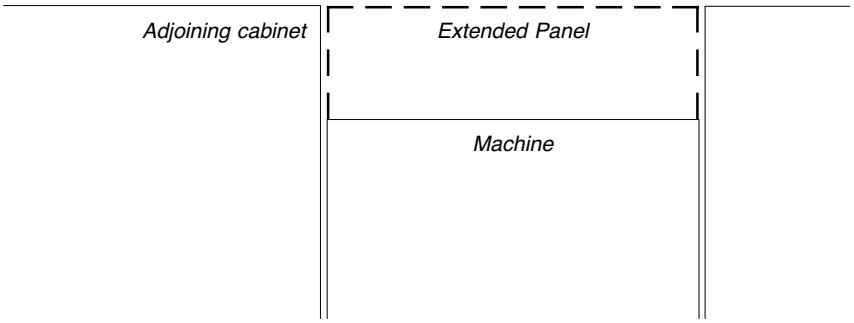

HINGING DETAILS

90° Door

Thickness options

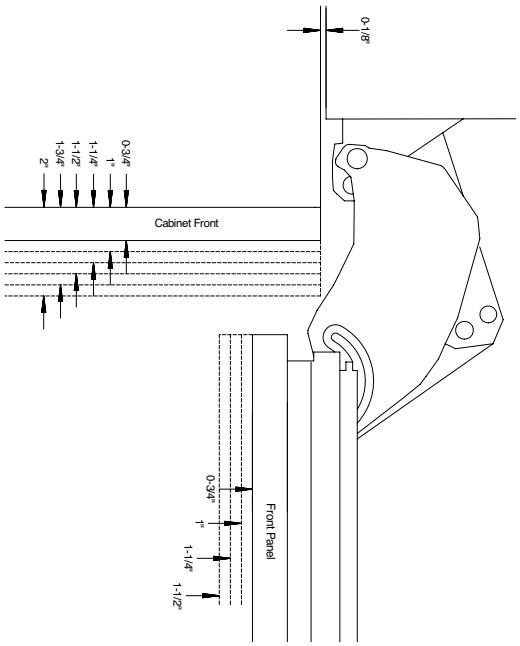

Door Swing

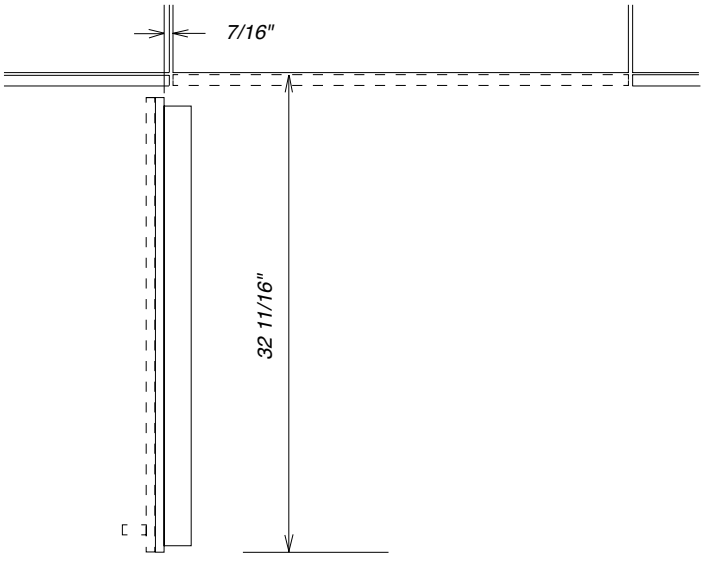

***NOTE**: Additional space needed depending on thickness of front panels and handle used*

115° Door

Thickness options

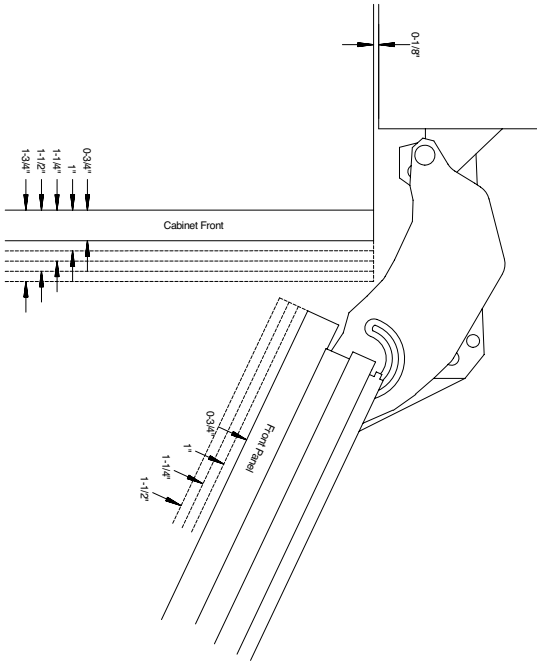

Door Swing

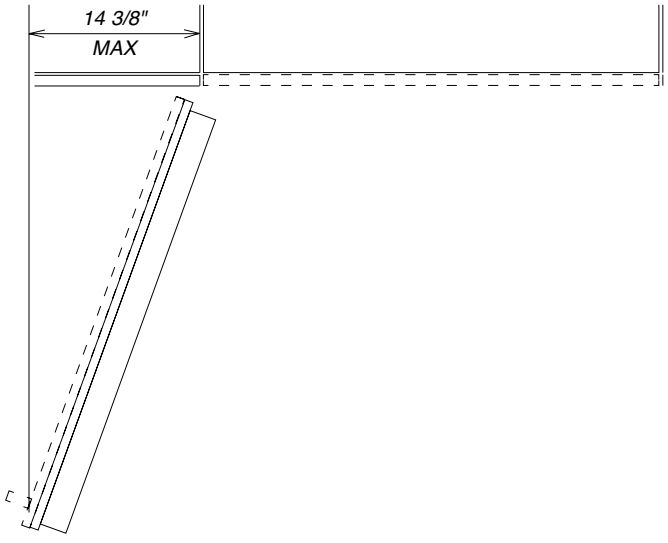

***NOTE**: Additional space needed depending on thickness of front panels and handle used*

HINGING DETAILS

115° Door

Thickness options

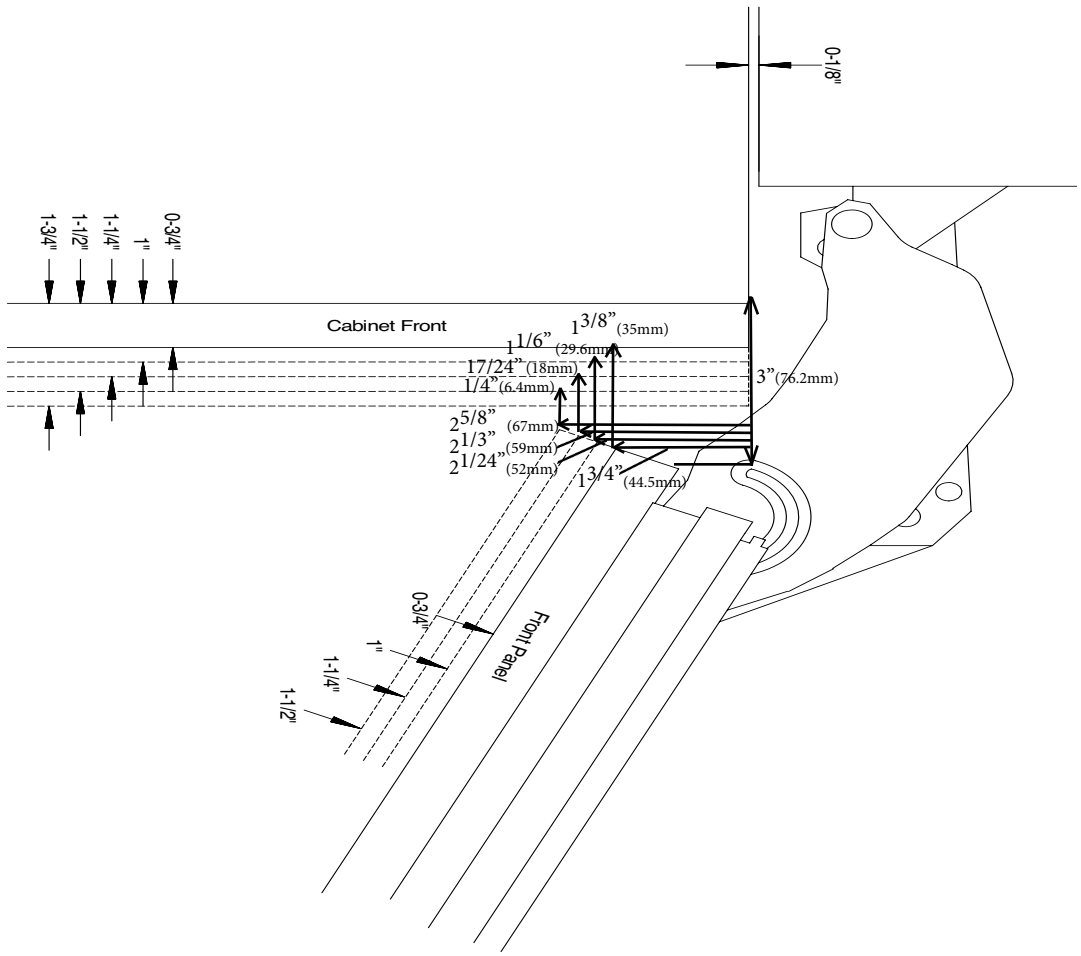

Door Swing

HINGING DETAILS FOR INSTALLATION WITH APPLIANCE/OBJECT ON HINGE SIDE

90° Door

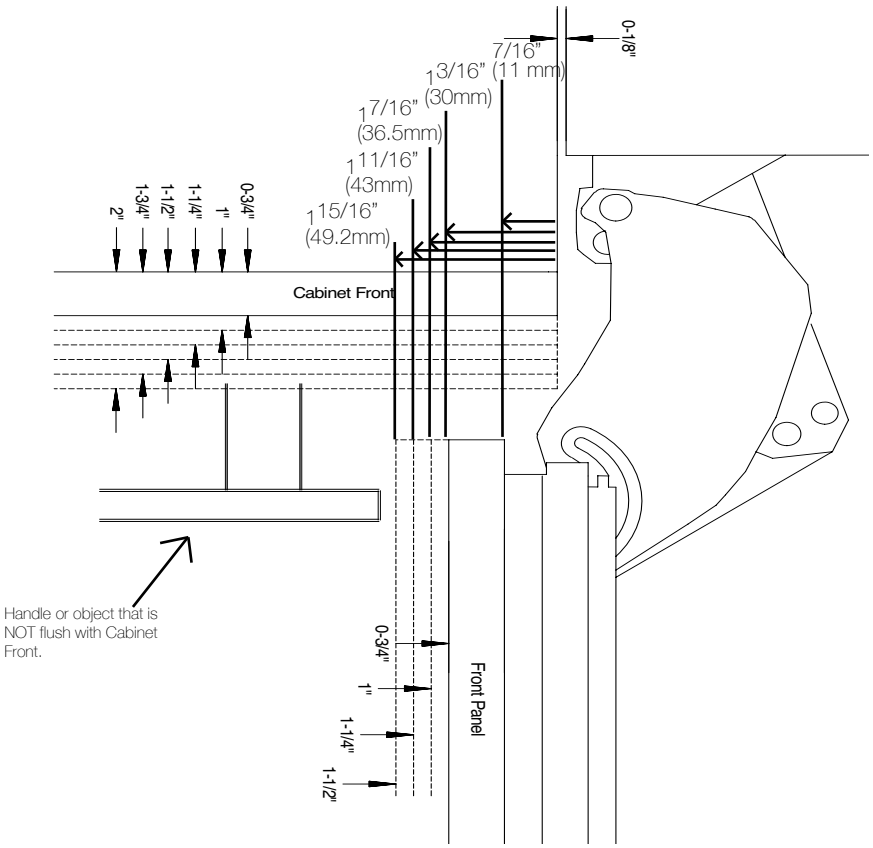

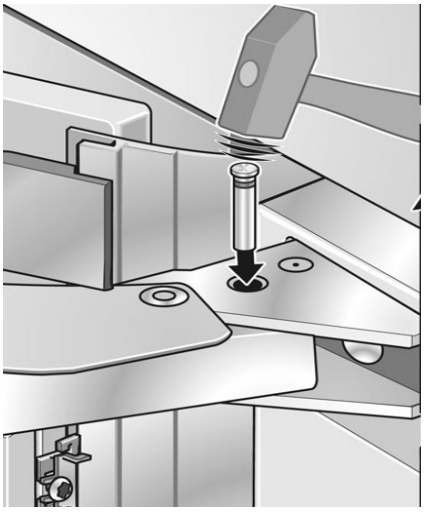

**When installing hing side next to an appliance or object that is within range of the door panel, limit the door opening angle to 90°. This is done by installing the banking pin as illustrated. Insert the banking pin through the holes and drive in with a hammer.